




Installation Instructions

Flat Posts

CAUTION: Use and wear the correct safety equipment. Please read and follow instructions for your safety. Always call 811 before you dig.

In most cases the Rhino 1-Rail™, 3-Rail™, 4-Rail™, FiberCurve™, PlastiCurve™, Hybrid 1-Rail™, Hybrid 3-Rail™, and Hybrid 4-Rail™. Markers can be quickly installed in three easy steps.

Step 1

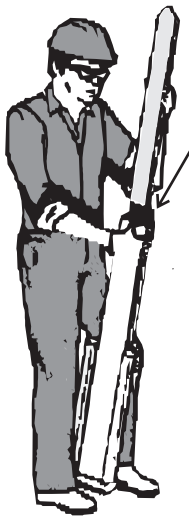


Remove marker from carton. Insert into the Flat Post Driver with the pointed end out.

Step 2



Rotate driver and marker into the correct position to install.


Step 3

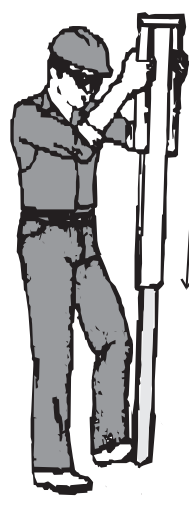

Drive marker with light taps into the ground with your foot braced against it to control buckling. Repeat until you reach burial depth of black line on post, while maintaining correct alignment of marker.


18 to 24" burial depth recommended.

Hardpan or Rocky Soil Installation

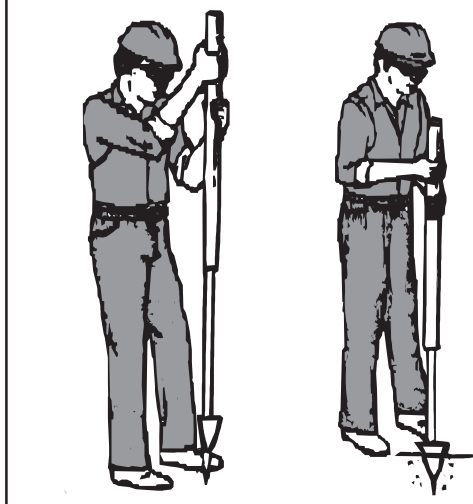

The Pilot Hole Driver is a quick way to prepare the ground when a starter hole is necessary. Follow this procedure:

- Align driver spade in the position you wish the marker to face.
- Use blows until spade is driven into the ground and driver stop is level with the ground.
- Remove driver with upward stroke and proceed with normal installation.

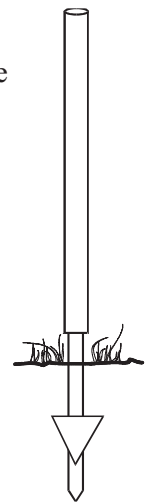

FLATPOST_INST • 3-26-10