




Installation Instructions

A-TAG™ Pavement Marker


Patent # 4,888,896

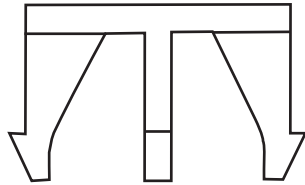

NEW CONSTRUCTION TAG

For Fresh Concrete/Asphalt


- 1) Determine location.
- 2) Place A-TAG in position.
- 3) Press down to insert A-TAG into fresh concrete/asphalt.
- 4) Make certain A-TAG is recessed below grade to protect marker.

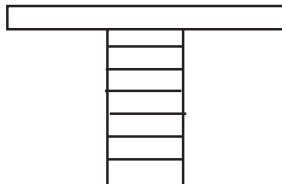

RETROFIT TAG

For Existing Concrete/Asphalt

- 1) Determine location.
- 2) Drill hole using the countersink A-TAG drill bit.
(Drill bit is compatible with SDS-Plus drills.)
- 3) Apply retrofit A-TAG adhesive to the back of the A-TAG.
- 4) Push Retrofit A-TAG into hole
- 5) Make certain A-TAG is recessed below grade to protect marker.

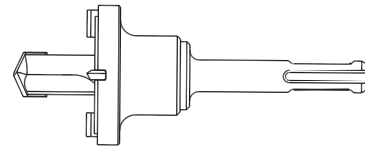

Drill Bit

DBRFT-SDS

ATAG_INST • 3-26-10